

### Ordering code

PSL 6 01 A □ □

① ② ③ ④ ⑤ ⑥

① Model	② Port size	③ Thread connection		④ Control method	⑤ Standard color		⑥ Thread type
PSL: Speed controller 	4 : Φ4mm 6 : Φ6mm 8 : Φ8mm	M5 : M5X0.8	Φ4 , Φ6	A: Meter-out  Handle marking "A" Controlled flow Free flow	Standard color: Blank: Gray	Specification: Release button: Gray Body: Gray	Blank: PT
PSS: Universal speed controller 	10 : Φ10mm 12 : Φ12mm	01 : 1/8" 02 : 1/4" 03 : 3/8" 04 : 1/2"	Φ4 , Φ6 Φ8 , Φ10 Φ12	B: Meter-in  Handle marking "B" Free flow Controlled flow	D: Black	Release button: Black Body: Black	

PSA 6 □

① ② ③

① Model	② Port size	③ Standard color	
PSA: Straight speed controller 	4 : Φ4mm 6 : Φ6mm 8 : Φ8mm 10 : Φ10mm 12 : Φ12mm	Standard color: Blank: Gray	Specification: Release button: Gray Body: Gray
		D: Black	Release button: Black Body: Black

 
### Product feature

1. The speed control is small size, and light weight with small installation space.
2. Effectively control the action speed and pressure signal transmission from pneumatic device.
3. Meter-in and meter-out types are optional, which is suitable for different size of actuators
4. Excellent flow characteristics, high sensitivity and easy to adjust.
5. The brass body adopts a special nickel-plating process, which has good corrosion resistance and anti-pollution property.
6. Anti-drop structure is designed on the regulating rod.
7. The sealant being coated on threaded portion can ensure no leakage of the threaded connection part.
8. The inserting direction of universal speed controller can be adjusted in 360°.

### Specification

<b>Operating pressure range</b>	0~10kgf/cm <sup>2</sup> (0~1.0MPa)
Negative pressure	-750mmHg(10Torr)
Proof pressure	1.5MPa
Ambient and fluid temperature (°C)	-20~70
Applicable tubing	Soft nylon or polyurethane
Color	Grey/black

### Symbol




### Table for interface port and tube O.D.


Product series	Thread type	Port size				
		Φ4	Φ6	Φ8	Φ10	Φ12
PSA	-	•	•	•	•	•
	M5	•	•			
PSL	1/8"	•	•	•		
	1/4"		•	•	•	
	3/8"		•	•	•	•
PSS	1/2"		•	•	•	•
	M5	•				
	1/8"		•	•		
	1/4"		•	•	•	
	3/8"				•	•
	1/2"					•

### Inner structure


#### PSA Series

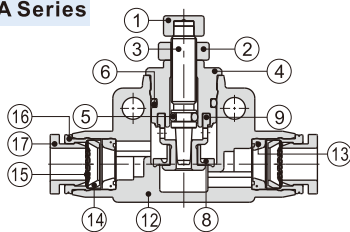

#### PSL Series

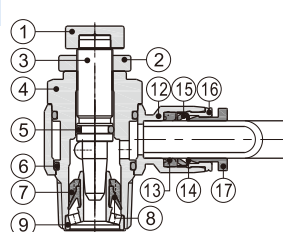

#### PSS Series

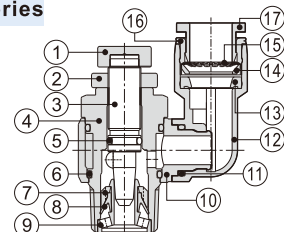


NO. 1	Name: Adjusting cap	Material: Aluminum alloy	NO. 7	Name: Holder	Material: PBT	NO. 13	Name: O-ring	Material: NBR
NO. 2	Name: Locking cap	Material: Aluminum alloy	NO. 8	Name: O-ring	Material: NBR	NO. 14	Name: Locating seat	Material: POM
NO. 3	Name: Throttling column	Material: Brass	NO. 9	Name: Throttling sleeve	Material: Aluminum alloy/Brass	NO. 15	Name: Spring gasket	Material: Stainless steel
NO. 4	Name: Throttling body	Material: Brass	NO. 10	Name: Plastic body	Material: PBT	NO. 16	Name: Locating ring	Material: Aluminum alloy
NO. 5	Name: O-ring	Material: NBR	NO. 11	Name: O-ring	Material: NBR	NO. 17	Name: Plastic interface	Material: POM
NO. 6	Name: O-ring	Material: NBR	NO. 12	Name: Plastic body	Material: PBT			

## PSA, PSL, PSS series

### Dimensions


#### PSL Series

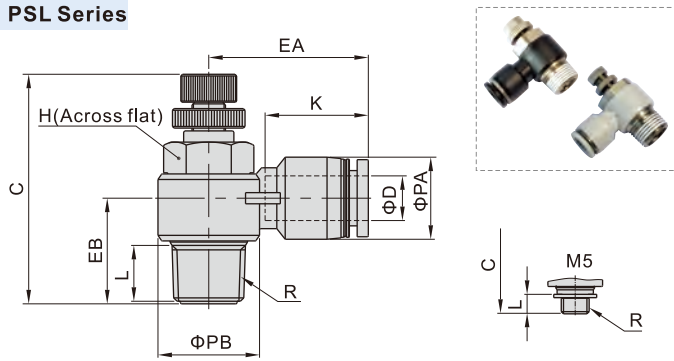

Model/Item [Note1]	ΦD	R	ΦPA	ΦPB	L	C		K	EA	EB	H	Weight (g)
						max	min					
PSL4M5□	4	M5×0.8	9	10	3.5	30	27.5	14	19	9.5	8	6.5
PSL401□		1/8"	9	14	7.5	41.5	35	14	20.5	15	11	16.5
PSL6M5□	6	M5×0.8	12.5	10	3.5	30	27.5	16.5	23.5	11.5	8	8
PSL601□		1/8"	12.5	14	7.5	41.5	35	16.5	23	15.5	11	17.5
PSL602□	6	1/4"	12.5	18	10	47.5	41	16.5	25	18	14	32
PSL603□		3/8"	12.5	22.5	11	52.5	45.5	16.5	27	20	19	59.5
PSL801□	8	1/8"	15	14	7.5	41.5	35	18.5	26.5	16.5	11	18
PSL802□		1/4"	15	18	10	47.5	41	18.5	28.5	19	14	33
PSL803□	8	3/8"	15	22.5	11	52.5	45.5	18.5	29.5	20	19	60
PSL804□		1/2"	15	28	14	58.5	51.5	18.5	32	25	24	96.5
PSL1002□	10	1/4"	18	18	10	47.5	41	21	31	20.5	14	34.5
PSL1003□		3/8"	18	22.5	11	52.5	45.5	21	33	21.5	19	62
PSL1004□	10	1/2"	18	28	14	58.5	51.5	21	35.5	25.5	24	98
PSL1203□		3/8"	21	22.5	11	52.5	45.5	23	36	23.5	19	64
PSL1204□	12	1/2"	21	28	14	58.5	51.5	23	38	27	24	100

[Note1] "□" stands for A or B. A indicates meter-out type while B indicates meter-in type. The two types are with the same overall dimension.


#### PSS Series

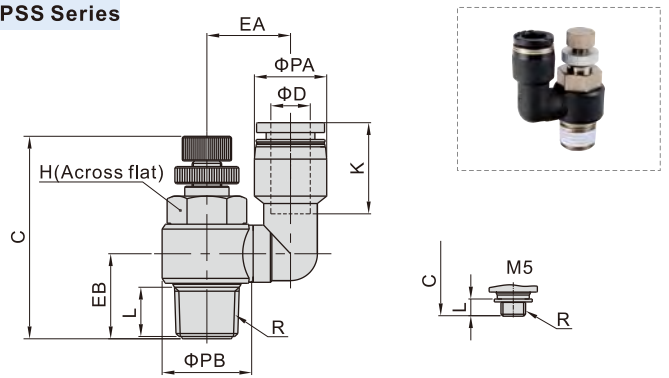

Model/Item [Note1]	ΦD	R	ΦPA	ΦPB	L	C		K	EA	EB	H	Weight (g)
						max	min					
PSS4M5□	4	M5×0.8	9	10	3.5	30	27.5	14	12.5	9.5	8	8.1
PSS601□	6	1/8"	12.5	14	7.5	41.5	35	17	17	15	11	19
PSS602□		1/4"	12.5	18	10	47.5	41	17	19	17.5	14	34.7
PSS801□	8	1/8"	15	14	7.5	41.5	35	18.5	17	15	11	20.2
PSS802□		1/4"	15	18	10	47.5	41	18.5	19	17.5	14	39.8
PSS1002□	10	1/4"	18	18	10	47.5	41	21	20.5	17.5	14	37.2
PSS1003□		3/8"	18	22.5	11	52.5	45.5	21	24	20	19	66
PSS1203□	12	3/8"	21	22.5	11	52.5	45.5	23	25.5	20	19	69.2
PSS1204□		1/2"	21	28	14	58.5	51.5	23	28	25	24	105.8

[Note1] "□" stands for A or B. A indicates meter-out type while B indicates meter-in type. The two types are with the same overall dimension.

#### PSA Series


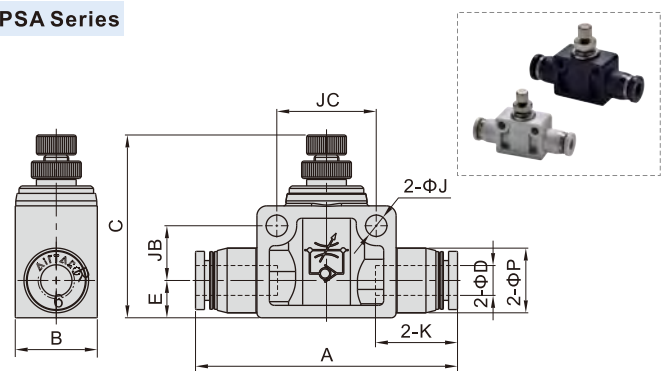


Model/Item	ΦD	A	B	C		ΦP	E	K	ΦJ	JB	JC	Weight (g)
				max	min							
PSA4	4	41	11	29	26.5	9.5	7	14	3.2	6	14	7.85
PSA6	6	52.5	16.5	43.5	36.5	13	7.5	16.5	4.3	11	20	18.3
PSA8	8	59.5	16.5	47	40	15	8.5	18.5	4.3	11	22	23.5
PSA10	10	69	21	53.5	46.5	18	10.5	21	4.3	14.5	26	42.4
PSA12	12	78.5	26	58.5	51	21.5	12	23	4.3	17.5	32	67.5















## PSA, PSL, PSS series

### Flowrate characteristic

#### Controlled flow rate

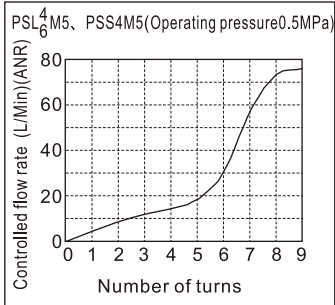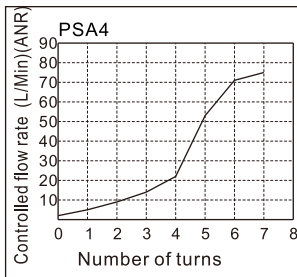

#### Free flow rate

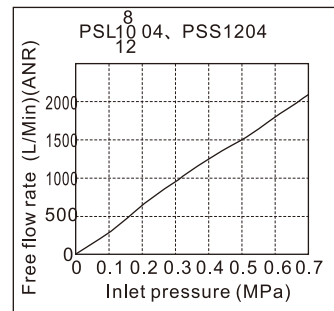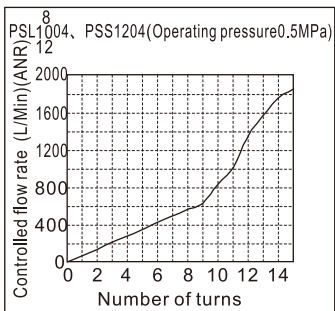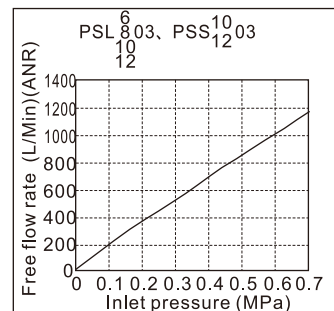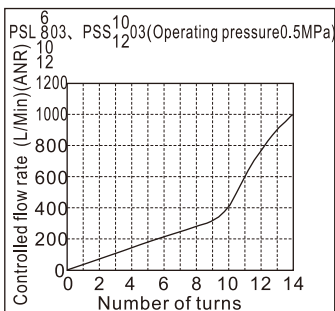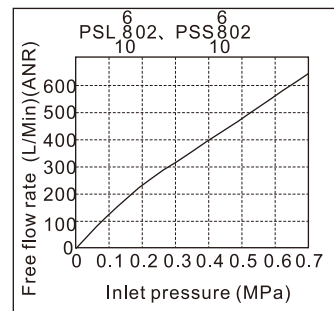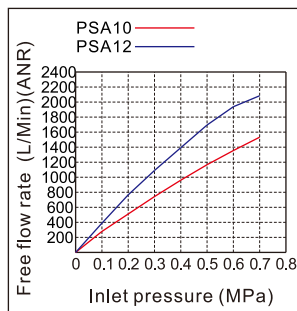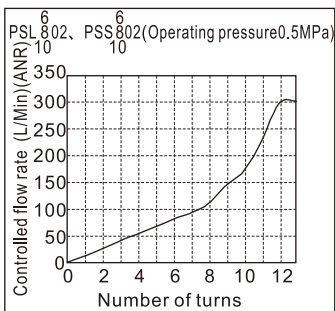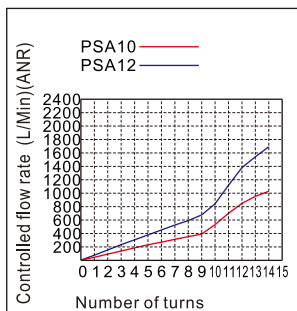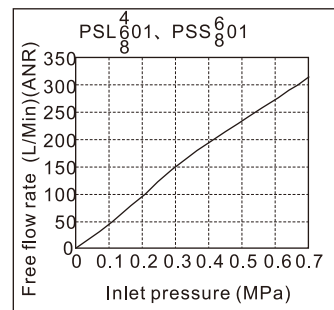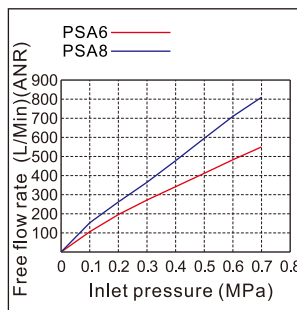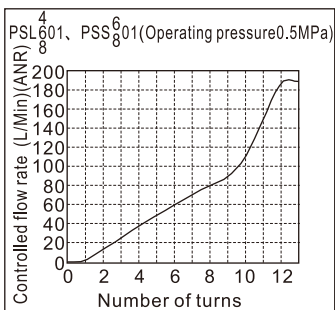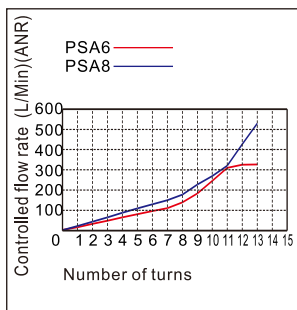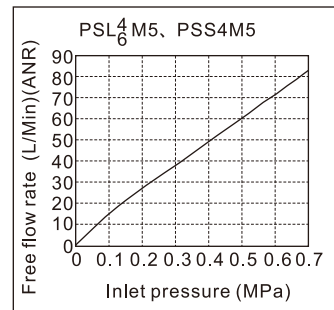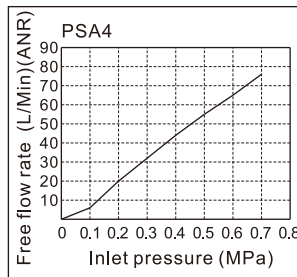

### Selection, Installation and Operation

#### Selection

 
- The speed controller has meter-out type and meter-in type:

	Working principle	Product identification
	<b>A: Meter-out</b> 1. The air flow is controlled from the threaded end to tubing connection end. 2. The air flow is free from the tubing connection end to the threaded end.	Handle marking "A" 
	<b>B: Meter-in</b> 1. The air flow is free from the threaded end to tubing connection end. 2. The air flow is controlled from the tubing connection end to the threaded end.	Handle marking "B" 

- Select the different control method according to the actual requirement. The meter-out type is the first priority.


- 2.1. The application example of the meter-out speed controller
- 2.2. The application example of the meter-in speed controller

Solenoid valve Double acting cylinder



Meter-out speed controller

 Solenoid valve Single acting cylinder



Meter-in speed controller

#### Installation

- Installation and removal of tubing:

- 1.1. Installation of tubing

Grasp the tubing and slowly push it into the fitting until it comes to a stop. The tubing will be locked by the spring gasket.

- 1.2. Removal of tubing



Push the release button to open the spring gasket so that the tubing can be released.

Note: When remove the tubing, make sure the pressure in the tubing is Zero.

2. Mounting of the speed controller

Mount the speed controller into the inlet and outlet port of the cylinder with a wrench.

Note: Please refer to the fittings for the tightening torque and thread screw-in depth.

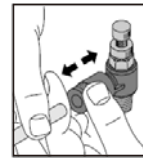
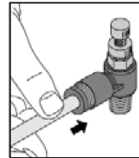


#### Operation

- Adjustment of the cylinder speed

- 1.1. Make sure the speed controller is turned off before applying air pressure. The cylinder may fly out due to the high speed if the air is inlet when the speed controller is turned on.

- 1.2. Adjust the speed by opening the needle slowly from the fully closed state. When a needle valve is turned clockwise, the air flow through is reduced and the actuator speed decreases. When a needle valve is turned counter-clockwise, the air flow through is increased and the actuator speed increases.

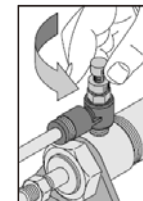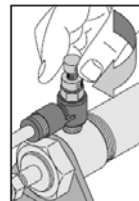

2. Operation of the speed controller

- 2.1. Do not use tools such as pliers to rotate the handle. Do not apply excessive force or shock when the needle is at the place of top or bottom. It can cause damage or air leakage.

- 2.2. A certain amount of leakage is allowed in the closed state of the speed controller. It is not designed for the use as stop valve with zero air leakage.